

# Joinco Importacao e Exportacao, Lda

Edificio Arcis Rua Ivone Silva 6– 15º piso, 1050-124 Lisboa

## TECHNICAL DATA SHEET

### HOFFEN Coffee Maker

EMAIL: [joao.esteves@joinco.pt](mailto:joao.esteves@joinco.pt)

Tel: 217546098

Contact person: Joao Esteves

Web: [www.joinco.pt](http://www.joinco.pt)



#### BENEFITS

This product with make 6cup coffee within 5mins

Item No.	Voltage	Package
CM-101	110V	inner color box +master carton

Material percentage: 55.32% plastic(pp) + 19.8% glass+  
7.47% Alunium + 2.8% Silicon+4.79% bakelite + 2.02% metel+ 5.43% cable(pvc)+ 2.37% others

#### DESCRIPTION

CM-101

Capacity:0.75L 6cup

Anti –drip function

Permanent filter included

Swing-out type filter holder

Overheat protection and thermofuse

On/off switch with light indicator

#### Cautions

Keep away from babies and children.

Pull up the power plug when the product not use.

## INSTRUCTIONS & DIRECTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an authorized service facility for examination, repair or adjustment.
7. The use of accessory not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surface.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. The container is designed for use with this appliance. It must never be used on a range top.
13. Do not clean container with cleansers, steel wool pads, or other abrasive material.
14. To disconnect, turn any control to "Off", remove plug from wall outlet. Always hold the plug. But never pull the cord.
15. Scalding may occur if the cover is removed during the brewing cycles. Be careful not to get burned by the steam.
16. Some parts of appliance are hot when operated, so do not touch with hand. Use handles or knobs only.
- 17. Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.**
18. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
19. Do not set a hot container on a hot or cold surface.
20. Do not let the coffee maker operate without water.